# Chromebook Troubleshooting




# Turning It on




Open the lid.
The Chromebook
will power on
automatically.

# Logging on This is where you will log in to your account.

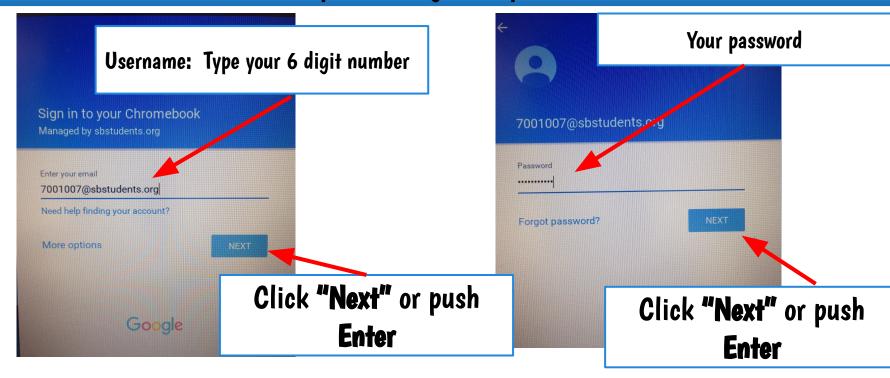


# Signing out

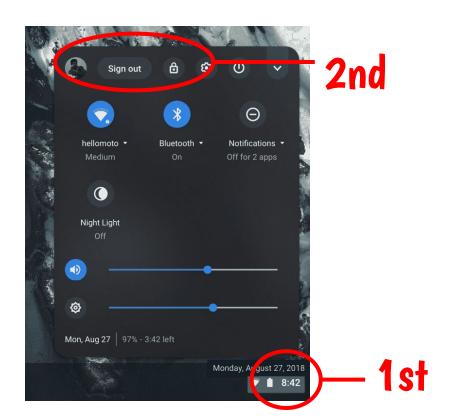

1. Click in the bottom right corner.

2. Click sign out at the top.


# Shutting Down

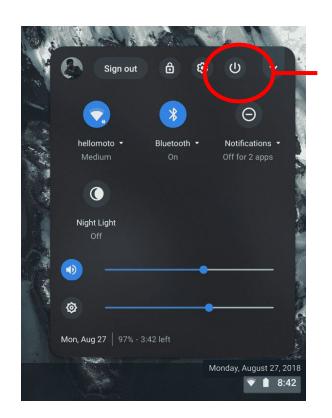

- 1. Hold down the power & button on the keyboard.

  OR
- 2. Click on the power  $\bigcirc$  button at top left.
- 3. Wait for the screen to turn black and the light on the keyboard to turn off.

# Changing the Volume Mute Softer

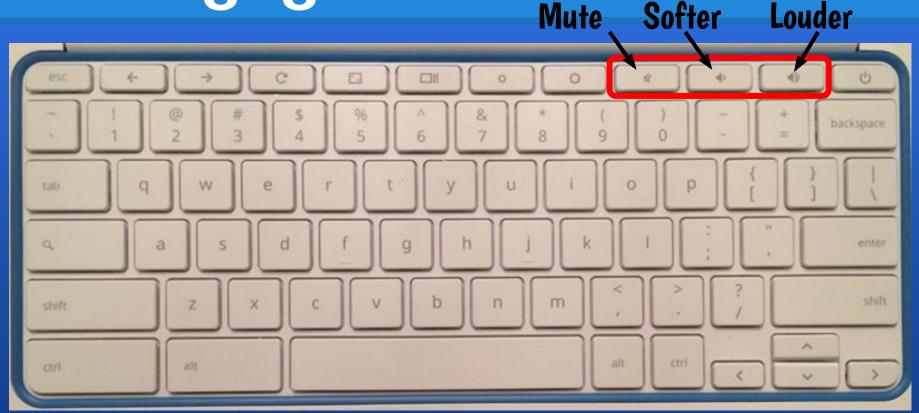

### Black Screen




- 1. Plug the chromebook in for power. It's possible the chromebook needs to be charged.
- 2. If there is a little blue light on the front of the chromebook, hold down the power button on the keyboard until the blue light goes out (about 10 seconds), then click the power (button again.

#### Frozen Screen



Hold down the power button for 10 seconds to turn off the Chromebook. Click the power button again to restart.

## Keyboard problems

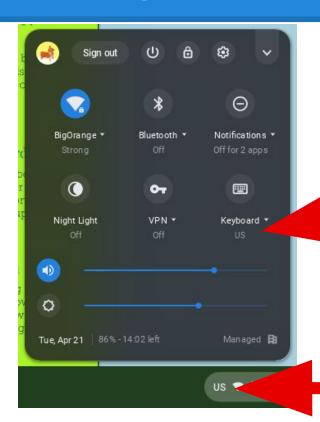

Make sure your keyboard is set to US and not INTL.

## Rotated Screen



Pressing ctrl + shift + refresh keys (refresh key is the spinning arrow at the top of keyboard) at the same time.

It will rotate the screen 90 degrees. Keeping pressing until it looks the way you want it.

### Text on screen is too large or too small



One of the most difficult processes to go through, moving on.

Aeman Incinia bibendum nulla sed consecretur. Vivarmus sagittis lacus vel augue la oer rutrum fuucibus dolor auctor. Meebi leo risus, porta ac consectenur ac, vestibulum at eros. Morbi leo risus, porta ac consecretur ac, vestibulum at eros. Lorem ipsum dolor s armet, consecretur adipiscing elit.

Visions suggitude to our dargue beserved traval function to their acustic following of the following of the

To change the resolution

Press CTRL+SHIFT+0 at the log in screen to reset the resolution.

To zoom in, press CTRL+-

To zoom out, press CTRL+SHIFT+ (plus)

#### Headphones



Wireless headphones do not usually work with MCPS chromebooks.

Make sure the headphones are plugged in securely.

 Click on the time in the bottom right corner. Click on the arrow next to the volume bar. A menu should pop up. Click on "Headphones" and the sound should come through your headphones now.

### Accessibility Features



- 1. To turn off Accessibility features, click Settings in the bottom right of your screen.
- 2. Click arrow next to Advanced on the left side.
- 3. Scroll and click Accessibility.
- 4. Click Manage Accessibility Features.
- 5. All features should be turned off unless required by student's needs.